

COBRA

Dry Screw Vacuum Pumps NX 0950 A Water-Cooled Version (WCV)

Instruction Manual





CE CK

Table of Contents

1	Safe	y					
2	Prod	uct Description					
	2.1	Operating Principle					
	2.2	Intended Use					
	2.3	Start Controls					
	2.4	Standard Features					
		2.4.1 Water Cooling					
		2.4.2 Temperature Switch					
		2.4.3 Sealing Systems					
	2.5	Optional Accessories					
		2.5.1 Gas Ballast Valve					
		2.5.2 Silencer					
		2.5.3 Barrier Gas System					
		2.5.5 Inlet Check Valve					
3	Tran	port					
4		qe					
5		llation					
5	5.1	Installation Conditions					
	5.2	Connecting Lines / Pipes					
	5.2	5.2.1 Suction Connection					
		5.2.2 Discharge Connection					
		5.2.3 Cooling Water Connection					
		5.2.4 Barrier Gas System Connection (Optional)					
	5.3	Filling Oil	10				
6	Elect	Electrical Connection					
	6.1	Machine delivered with a Variable Speed Drive	19				
	6.2	Electrical Connection of the Variable Speed Drive	2				
	6.3	Wiring Diagram Variable Speed Drive (VSD)	2				
	6.4	Start / Stop Connection					
	6.5	Wiring Diagram Three-Phase Motor (Pump Drive)					
	6.6	Electrical Connection of the Monitoring Devices					
	0.0	6.6.1 Wiring Diagram Temperature Switch					
7	Com	nissioning	2				
	7.1	Conveying Condensable Vapors					
8	Main	Maintenance					
	8.1	Maintenance Schedule	28				
	8.2	Oil Level Inspection	29				
	8.3	Cleaning the Inlet Screen	29				
	8.4	Cleaning the Gas Ballast Filter (Optional)					
	8.5	Oil Change					
9	Over	- naul					
10		mmissioning					
	10.1	Dismantling and Disposal					
11	Spar	Parts					
12	-	pleshooting					
		-	_				

13	Technical Data	38
14	Oil	39
15	EU Declaration of Conformity	40
16	UK Declaration of Conformity	41

1 Safety

Prior to handling the machine, this instruction manual should be read and understood. If anything needs to be clarified, please contact your Busch representative.

Read this manual carefully before use and keep for future reference.

This instruction manual remains valid as long as the customer does not change anything on the product.

The machine is intended for industrial use. It must be handled only by technically trained personnel.

Always wear appropriate personal protective equipment in accordance with the local regulations.

The machine has been designed and manufactured in accordance with the state-of-the-art methods. Nevertheless, residual risks may remain, as described in the following chapters and in accordance with the chapter $Intended\ Use\ [\rightarrow\ 6]$.

This instruction manual highlights potential hazards where appropriate. Safety notes and warning messages are tagged with one of the keywords DANGER, WARNING, CAUTION, NOTICE and NOTE as follows:



DANGER

... indicates an imminent dangerous situation that will result in death or serious injuries if not prevented.



WARNING

... indicates a potentially dangerous situation that could result in death or serious injuries.



CAUTION

... indicates a potentially dangerous situation that could result in minor injuries.



NOTICE


... indicates a potentially dangerous situation that could result in damage to property.



NOTE

... indicates helpful tips and recommendations, as well as information for efficient and trouble-free operation.

Product Description 2

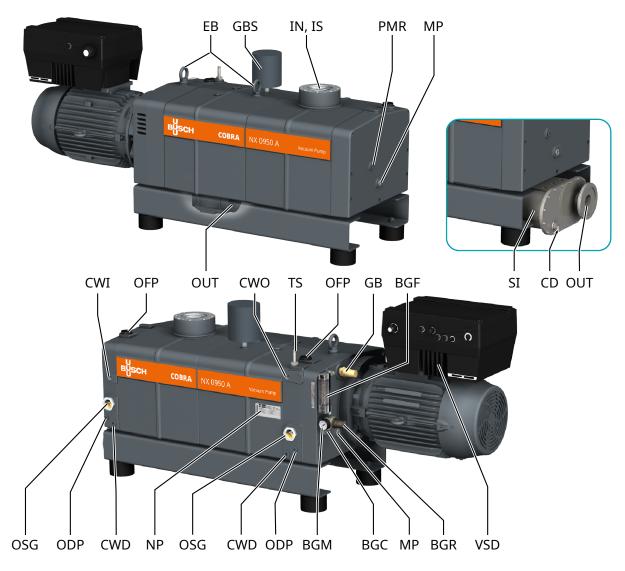

Description	Description					
IN	Suction connection (Inlet)	OUT	Discharge connection (Outlet)			
BGC	Barrier gas connection	BGF	Barrier gas flow meter			
BGM	Barrier gas manometer	BGR	Barrier gas pressure regulator			
CD	Condensate drain	CWD	Cooling water drain plug			
CWI	Cooling water inlet	CWO	Cooling water outlet			
EB	Eye bolt	GB	Gas ballast valve			
GBS	Gas ballast silencer	IS	Inlet screen			
MP	Magnetic plug	NP	Nameplate			
ODP	Oil drain plug	OFP	Oil fill plug			
OSG	Oil sight glass	PMR	Plug for manual rotation of rotors			
SI	Silencer	TS	Temperature switch			
VSD	Variable Speed Drive					



NOTE

Technical term.

In this instruction manual, we consider that the term 'machine' refers to the 'vacuum pump'.





NOTE

Illustrations.

In this instruction manual, the illustrations may differ from the appearance of the machine.

2.1 Operating Principle

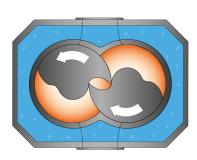

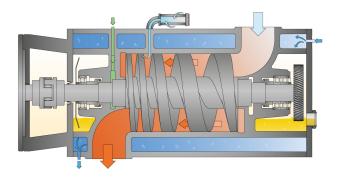

The machine works on the one-stage, twin-screw pump principle.

Two screw rotors rotate inside the cylinder. The pumped medium is trapped between the cylinder and screw chambers, compressed, and transported to the gas outlet. During the compression process, the two screw rotors do not come into contact with each other or with the cylinder. There is no need for a lubrication or an operating fluid in the compression chamber.

2.2 Intended Use



In case of foreseeable misuse outside the intended use of the machine.

Risk of injuries!

Risk of damage to the machine!

Risk of damage to the environment!

• Make sure to follow all instructions described in this manual.

The machine is intended for the suction of air and other dry, non-aggressive, non-toxic, non-ignitable and non-explosive gases.

Conveying of other media leads to an increased thermal and/or mechanical load on the machine and is permissible only after a consultation with Busch.

The machine is intended for the placement in a non-potentially explosive environment.

The machine is capable of maintaining ultimate pressure, see Technical Data.

The machine is suitable for continuous operation.

Permitted environmental conditions, see Technical Data.

NOTICE

Chemical compatibility of the process gases with the machine component materials.

Risk of corrosion inside the compression chamber which can reduce performance and its life-

- Check if the process gases are compatible with those following materials:
 - Cast iron
 - Steel
 - Fluor elastomer (FKM/FPM)
- Contact your Busch representative for further advice and information.

2.3 **Start Controls**

The machine is equipped with a variable speed drive.

2.4 **Standard Features**

2.4.1 Water Cooling

The machine is cooled by a cooling water circuit in the cylinder cover and cylinder.

2.4.2 Temperature Switch

The temperature switch monitors the cooling water temperature of the machine.

The temperature switch has one switch point:

Switch point T = 70°C	Trip, the machine must be stopped, pin 1+2 (see <i>Electrical Connection</i>
	of the Monitoring Devices [→ 24]).

2.4.3 **Sealing Systems**

The machine is equipped with labyrinth seals on the motor side and suction side.

Sealing systems prevent the process gas going to the bearings chambers.

Depending on the application, the sealing systems efficiency can be improved with a barrier gas system, see Barrier Gas System $[\rightarrow 7]$.

Optional Accessories 2.5

2.5.1 **Gas Ballast Valve**

The gas ballast valve mixes the process gas with a limited quantity of ambient air to counteract the condensation of vapor inside the machine.

The gas ballast valve has an influence on the ultimate pressure of the machine, see Technical Data.

2.5.2 Silencer


A silencer at the discharge connection (OUT) can be provided to reduce the exhaust gas noise.

2.5.3 **Barrier Gas System**

The barrier gas system allows the supply of compressed air or nitrogen into the motor side shaft seals to improve the sealing efficiency.

2.5.4 Inlet Filter

The inlet filter protects the machine against dust and other solids in the process gas. The inlet filter is available with a paper or polyester cartridge.

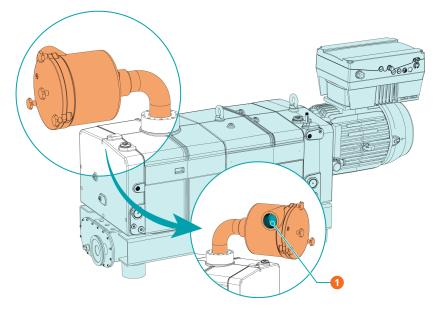

Description			
1	Connection size: G3'		

2.5.5 Inlet Check Valve


In order to avoid reverse rotation after switching off, the machine can be equipped with an inlet check valve.

The inlet check valve also prevents fast venting of the connected vacuum system.

The inlet check valve can also be equipped with a pressure sensor. Contact your Busch representative for further advice and information.

Pressure sensor range and accuracy

Range: 0-1600 mbar Accuracy: +/- 9.6 mbar

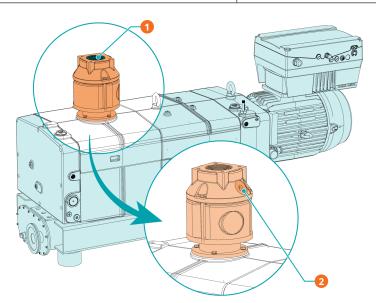

Description				
1	Connection size: G3'	2	Connection size: G1/2	

3 Transport





Suspended load.

Risk of severe injury!

• Do not walk, stand, or work under suspended loads.





Lifting the machine using the motor eye bolt.

Risk of severe injury!

• Do not lift the machine using the eye bolt fitted to the motor. Only lift the machine as shown.




NOTICE


In case the machine is already filled with oil.

Tilting a machine that is already filled with oil can cause large quantities of oil to ingress into the cylinder.

- Drain the oil prior to every transport or always horizontally transport the machine.
- To find out the weight of the machine, refer to the chapter Technical Data or the nameplate (NP).
- Make sure that the eye bolt(s) (EB) is/are in faultless condition, fully screwed in and tightened by hand.

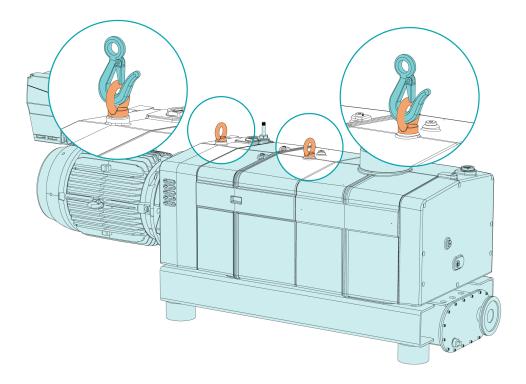

- Make sure that each of the slings used to lift the machine has a minimum length of 400 mm.
- Make sure that the length of each sling is exactly the same.

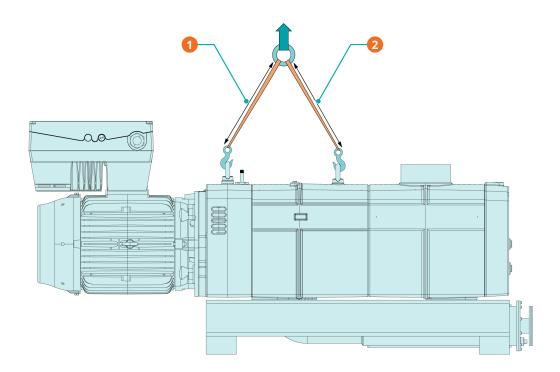

Description			
1	Minimum length: 400 mm	2	Minimum length: 400 mm

• Check the machine for transport damage.

If the machine is secured to a base plate:

• Remove the machine from the base plate.

4 Storage

- Seal hermetically all apertures with the caps provided with the machine, or with adhesive tape if the caps are no longer available.
- Store the machine indoors, in a dry place, away from dust and vibrations and if possible, in original packaging, preferably at temperatures between 5 ... 55 °C.

If the machine is to be stored for more than 3 months:

- Seal hermetically all apertures with the caps provided with the machine, or with adhesive tape if the caps are no longer available.
- Wrap the machine in a corrosion inhibitor film.
- Store the machine indoors, in a dry place, away from dust and vibrations and if possible, in original packaging, preferably at temperatures between 5 ... 55 °C.



NOTICE

Long storage time.

Risk of damage to the machine!

- Due to a long storage time the capacitors of the variable speed drive can lose efficiency because of electrochemical processes. In the worst case, it can lead to a short-circuit and therefore to a damage to the variable speed drive of the machine.
- Connect the machine every 18 months for 60 minutes to the mains.

5 Installation

5.1 Installation Conditions



Use of the machine outside of the permitted installation conditions.

Risk of premature failure!

Loss of efficiency!

- Make sure that the installation conditions are fully respected.
- Make sure that the environment of the machine is not potentially explosive.
- Make sure that the ambient conditions comply with the Technical Data.
- Make sure that the environmental conditions comply with the protection class of the motor and the electrical elements.
- Make sure that the installation space or location is vented such that sufficient cooling of the machine is provided.
- Make sure that cooling air inlets and outlets of the motor and variable speed drive (VSD) fans are not covered or obstructed and that the cooling air flow is not affected adversely in any other way.
- Make sure that the oil sight glass (OSG) remains easily visible.
- Make sure that enough space remains for maintenance work.
- Make sure that the machine is placed or mounted horizontally, a maximum deviation of 1° in any direction is acceptable.
- Check the oil level, see Oil Level Inspection [→ 29].
- Make sure that the cooling water complies with the requirements, see Cooling Water Connection
 1⇒ 151.

If the machine is installed at an altitude greater than 1000 meters above sea level:

 Contact your Busch representative, the motor must be derated or the ambient temperature limited.

5.2 Connecting Lines / Pipes

- Remove all protective covers before installation.
- Make sure that the connection lines cause no stress on the connections of the machine. Therefore, we recommend installing flexible lines on the suction and discharge connections.
- Make sure that the diameter of the connection lines over the entire length is at least as large as the connections of the machine.

In case of long connection lines:

- Use larger diameters to avoid a loss of efficiency.
- Contact your Busch representative for more information.



Unprotected suction connection.

Risk of severe injury!

• Do not put hand or fingers in the suction connection.



NOTICE

Ingress of foreign objects or liquids.

Risk of damage to the machine!

If the inlet gas contains dust or other foreign solid particles:

• Install a suitable filter (5 micron or less) upstream from the machine.


Connection size(s):

- G3"
- ISO DN100, DIN 28404

If the machine is used as part of a vacuum system:

- Busch recommends the installation of an isolation valve in order to prevent the machine from turning backwards.
- Make sure that the connection lines cause no stress on the connections of the machine. Therefore, we recommend installing flexible lines on the suction and discharge connections.

5.2.2 Discharge Connection

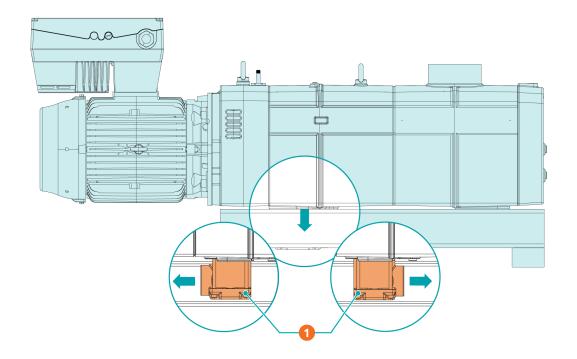

Description				
1	Discharge variants (without silencer)			



Discharge gas flow obstructed.

Risk of damage to the machine!

• Make sure that the discharged gas will flow without obstruction. Do not shut off or throttle the discharge line or use it as a pressurized air source.

Connection size(s):


At the machine discharge connection:

- G3", horizontal (orientable 180°)
- ISO DN100, DIN 28404, vertical (without discharge elbow)

At the silencer (SI) discharge connection (Optional):

- ISO DN100, DIN 28404, horizontal
- Make sure that the connection lines cause no stress on the connections of the machine. Therefore, we recommend installing flexible lines on the suction and discharge connections.
- Make sure that the counter pressure (also called "back pressure") at the discharge connection (OUT) does not exceed the maximum allowable discharge pressure, see Technical Data.

Cooling Water Connection 5.2.3

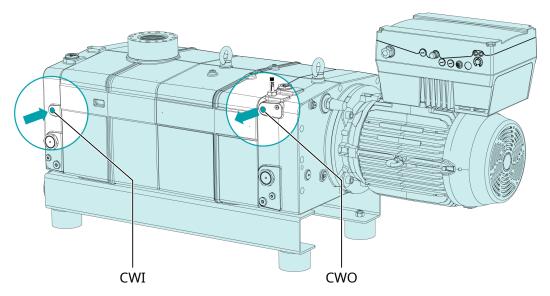

Description				
CWI	Cooling water inlet	CWO	Cooling water outlet	

• Connect the cooling water connections (CWI / CWO) to the water supply.

Connection size:

- G ½", ISO 228-1 (CWI / CWO)
- Make sure that the cooling water complies with the following requirements:

Supply capacity	l/min	8 16
Water pressure	bar (g)	1 6
Supply temperature	°C	+10 +30
Required pressure differential across supply and return	bar (g)	≥1

Cooling water supply temperature in Fahrenheit degrees:

- +50 ... +86 °F
- To reduce the maintenance effort and ensure a long product lifetime, we recommend the following cooling water quality:


Hardness	mg/l (ppm)	< 90	
Properties	Clean & clear		
PH value	78		
Particle size	μm	< 200	
Chloride	mg/l	< 100	
Electrical conductivity	μS/cm	≤ 100	
Free chloride	mg/l	< 0.3	
Materials in contact with the cooling water	Stainless steel and cast iron		



Water hardness unit conversion.

1 mg/l (ppm) = 0.056 °dh (german degree) = 0.07 °e (english degree) = 0.1 °fH (french degree)

5.2.4 Barrier Gas System Connection (Optional)

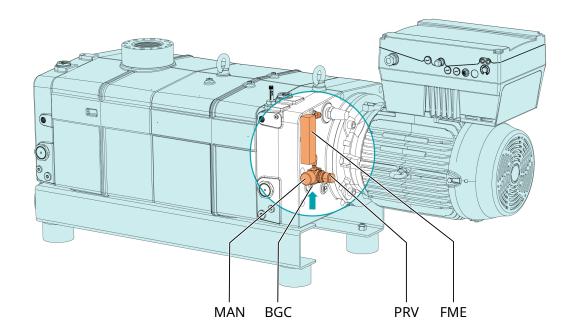

Description					
BGC	Barrier gas connection	FME	Flow meter		
MAN	Manometer	PRV	Pressure regulating valve		

• Connect the barrier gas connection (BGC) to the gas supply.

Connection size:

- G1/4", ISO 228-1
- Make sure that the gas complies with the following requirements:

Gas type	Dry nitrogen or air	
Gas temperature	°C	0 60
Maximum gas pressure	bar (g)	13
Recommended pressure setting at the pressure regulating valve (PRV)	bar (g)	3
Filtration	μm	5
Recommended flow rate	SLM (standard li- ter per minute)	15 20
Air quality (only for air)	Acc. to ISO 8573-1	Class 5.4.4.

5.3 Filling Oil



NOTICE


Use of an inappropriate oil.

Risk of premature failure!

Loss of efficiency!

• Only use an oil type which has previously been approved and recommended by Busch.

For oil type and oil capacity see Technical Data and Oil [\rightarrow 39].

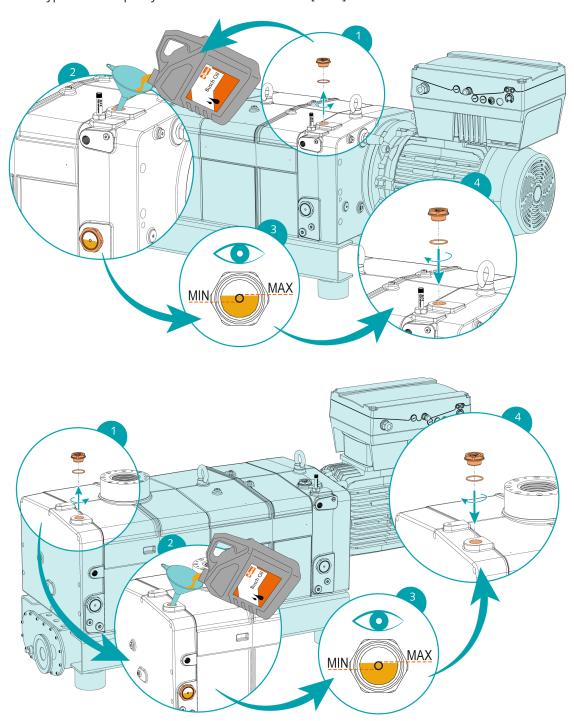

When the oil filling is achieved:

• Write down the oil change date on the sticker.



If there is no sticker (part no. 0565 568 959) on the machine:

• Order it from your Busch representative.

6 Electrical Connection





Live wires.

Risk of electrical shock!

• Electrical installation work must only be executed by qualified personnel.

INSTALLATION(S) CURRENT PROTECTION:





Missing current protection.

Risk of electrical shock!

- Provide current protection in accordance with EN 60204-1 on your installation(s).
- The electrical installation must comply with the applicable national and international standards.



Electromagnetic compatibility.

- Make sure that the motor of the machine will not be affected by electric or electromagnetic disturbance from the mains. If necessary, contact your Busch representative for more information.
- Make sure that the EMC of the machine is compliant with the requirements of your supply network system, if necessary, provide further interference suppression (EMC of the machine, see EU Declaration of Conformity [→ 40] or UK Declaration of Conformity [→ 41]).

Machine delivered with a Variable Speed Drive 6.1





Live wires. Carry out any work on the variable speed drive and motor.

Risk of electrical shock!

Electrical installation work must only be executed by qualified personnel.





DANGER

Maintenance work without disconnecting the variable speed drive.

Risk of electrical shock!

- Disconnect and isolate the variable speed drive before attempting any work on it. High voltages are present at the terminals and within the variable speed drive for up to 10 minutes after disconnection of the electrical supply.
- Always ensure by using a suitable multimeter that no voltage is present on any drive power terminals prior to commencing any work.





CAUTION

When wiring a variable speed drive for power or signal connections purpose.

Risk of electrical short-circuits and irreversible damage to the variable speed drive due to metallic foreign bodies (e.g. copper wire) falling into the variable speed drive!

Make sure to follow the following instructions to ensure proper operation of the machine and the variable speed drive, and not to void the warranty!

- Lay/unlay cables with the variable speed drive cover closed, and not on top of the variable speed drive.
- Once the cables have been prepared, open the variable speed drive cover, and connect the ca-
- If necessary, contact Busch for advice and information.



NOTICE

The admissible motor speed exceeds the recommendation.

Risk of damage to the machine!

Check the admissible motor speed range, see Technical Data.



NOTICE

The motor frequency is below 20 Hz.

Risk of damage to the machine!

• The motor nominal speed must always be higher than 1200 min⁻¹ (20 Hz).

NOTICE

Incorrect connection.

Risk of damage to the variable speed drive!

- The wiring diagrams given below are typical. Check the connection instructions/diagrams.
- Make sure that the power supply for the drive is compatible with the data on the nameplate of the variable speed drive.
- If the machine is equipped with a power connector, install a residual current protective device to protect persons in case of a defective insulation.
 - Busch recommends installing a type B residual protective device suitable for the electrical installation.
- If the variable speed drive is not equipped with a lockable disconnect switch, provide it on the power line so that the machine is completely secured during maintenance tasks.
- Provide a lockable disconnect switch or an emergency stop switch on the power line so that the machine is completely secured in case of an emergency situation.
- Provide an overload protection according to EN 60204-1.
 - Busch recommends installing a C-curve circuit breaker.
- Connect the protective earth conductor.
- Electrically connect the Variable Speed Drive (VSD), see Electrical Connection of the Variable Speed
 Drive [→ 21].

6.2 **Electrical Connection of the Variable Speed Drive**

The following applies to machines equipped with an on-board variable speed drive.






When wiring a variable speed drive for power or signal connections purpose.

Risk of electrical short-circuits and irreversible damage to the variable speed drive due to metallic foreign bodies (e.g. copper wire) falling into the variable speed drive!

Make sure to follow the following instructions to ensure proper operation of the machine and the variable speed drive, and not to void the warranty!

- Lay/unlay cables with the variable speed drive cover closed, and not on top of the variable speed
- Once the cables have been prepared, open the variable speed drive cover, and connect the ca-
- If necessary, contact Busch for advice and information.
- Make sure that the power supply for the drive is compatible with the data on the nameplate of the variable speed drive.
- Make sure that the motor of the machine will not be affected by electric or electromagnetic disturbance from the mains. If necessary, contact Busch for advice and information.
- Remove the cover from the variable speed drive. The cover is connected to the PE terminals with a PE cable. Do not interrupt this cable.

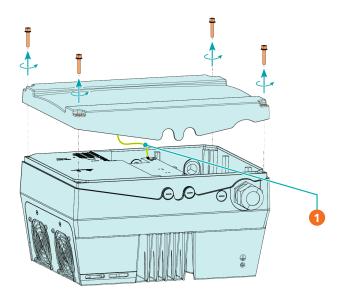

Descri	otion	
1	PE cable	

Connect the mains cable as shown in the chapter Wiring Diagram Variable Speed Drive (VSD) [**→** 22].


6.3 Wiring Diagram Variable Speed Drive (VSD)



The machine will start immediately when power is supplied.

Risk of inadvertent start-up!

• Make sure that a start-up will not lead to a dangerous situation.

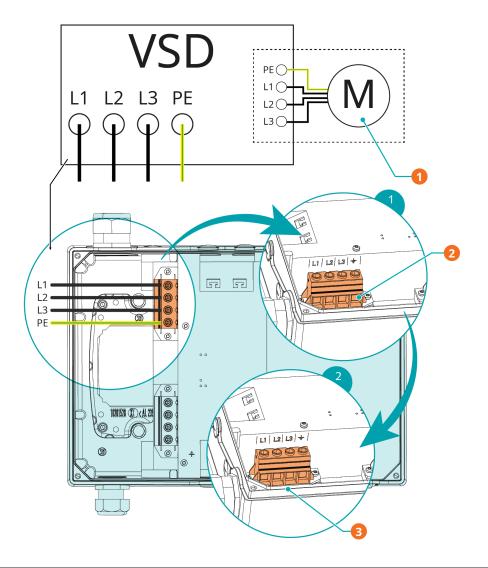

Description			
1	Motor already wired	2	Connect PE
3	Connect L1, L2, L3		

Start / Stop Connection 6.4

The following applies to machines equipped with an on-board variable speed drive.


- The Variable Speed Drive (VSD) is delivered with preset factory parameters. Please refer to the specific wiring diagram supplied inside the variable speed drive.
- For the connection of the control cables, install a cable in a bore hole at the terminal box (TB). Use EMC cable fittings if required.
- These parameters can be changed according to the specific document "Pump Control Instructions, art. no.: 0870208958". Contact your local Busch agency or your Busch representative to check if your machine is a custom or a standard one.

Wiring Diagram Three-Phase Motor (Pump Drive) 6.5


The following applies to machines not equipped with an on-board variable speed drive and on which an external speed drive can be installed.

- Make sure that you select the proper speed drive according to the motor specifications.
- Connect the motor to your external speed drive according to the operating instructions of your external speed drive.
- Connect the motor cables as shown in the below wiring diagram.

Delta connection (low voltage):

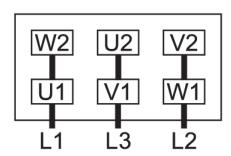

Star connection (high voltage):

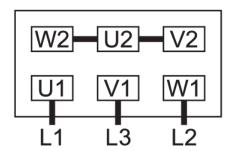




Incorrect direction of rotation.

Risk of damage to the machine!

• Operation in the wrong direction of rotation can destroy the machine in a short time! Prior to start-up, ensure that the machine is operated in the right direction.

The intended rotation direction of the motor is defined by the illustration below:

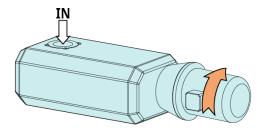

- Jog the motor briefly.
- Watch the fan wheel of the motor and determine the direction of rotation just before the fan wheel stops.

If the rotation of the motor must be changed:

• Switch any two of the motor phase wires.

6.6 Electrical Connection of the Monitoring Devices



NOTE


To prevent potential nuisance alarms, Busch recommends that the control system is configured with a time delay of at least 20 seconds.

6.6.1 Wiring Diagram Temperature Switch

Part no.: 0651 563 762 **Connector:** M12x1, 4-pin

Electrical data: $U = \le 250 \text{ V AC/DC } (50/60 \text{ Hz}); I = \le 1 \text{ A}$

Switch point: T_{trip} = 70° C ▶ pin 1 + 2

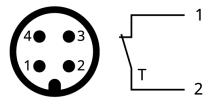

1 = Brown; 2 = White; 3 = Blue; 4 = Black

Commissioning





During operation the surface of the machine may reach temperatures of more than 70°C. **Risk of burns!**

• Avoid contact with the machine during and directly after operation.





Noise of running machine.

Risk of damage to hearing!

If people are present in the vicinity of a machine that is not insulated from noise for extended periods of time:

Make sure to wear hearing protection.



NOTICE

The machine can be shipped without oil.

Operation without oil will ruin the machine in short time!

Prior to commissioning, the machine must be filled with oil, see Filling Oil [→ 16].



NOTICE

Lubricating a dry running machine (compression chamber).

Risk of damage to the machine!

- Do not lubricate the compression chamber of the machine with oil or grease.
- Make sure that the *Installation Conditions* [→ 12] are met.
- Turn on the water supply.

If the machine is equipped with a barrier gas system:

- Turn on the barrier gas supply.
- Adjust the barrier gas pressure.
- Start the machine.
- Make sure that the maximum permissible number of starts does not exceed 6 starts per hour. Those starts should be spread within the hour.
- Make sure that the operating conditions comply with the Technical Data.
- After a few minutes of operation, perform an *Oil Level Inspection* [→ 29].

As soon as the machine is operated under normal operating conditions:

• Measure the motor current and record it as reference for future maintenance and troubleshooting work.

7.1 Conveying Condensable Vapors





Draining the condensate while operating and/or venting the machine.

The discharged gases and/or liquids may reach temperatures above 70°C!

Risk of burns!

• Avoid direct contact with the flow of gases and/or liquids.

Observe the following when conveying condensable vapors, e.g. water vapors:

START

- Close the isolation valve*
- Start the machine
- Warm up the machine for 30 minutes (WARM-UP MODE)
- Open the isolation valve* and perform the process
- Close the isolation valve*
- Dry the machine (SHUT-DOWN MODE)
- Wait 30 minutes
- Stop the machine

END

- * Not included in the scope of delivery.
- Limit the flow rate with cold cooling water (<20°C):
 - 8 ... 12 l/min
- Ensure that the barrier gas system (dry compressed air) is connected. Check the volume flow on the barrier gas flow meter (BGF), see *Barrier Gas System Connection (Optional)* [→ 16].
- Make sure that the air gas ballast (GB) is mounted and open. If the gas ballast filter is dirty, it must be cleaned periodically (unscrew and wash out).
- Make sure that no liquid can enter the machine via the silencer on the pressure side. Install pipes connected on the outlet side with a gradient away from the vacuum pump. In the case of rising exhaust pipes, provide a condensate trap (e.g. "dead leg") with drain.
- Water vapor within the gas flow is tolerated within certain limits. The conveyance of other vapors shall be agreed upon with Busch.

Maintenance 8





Live wires.

Risk of electrical shock!

Electrical installation work must only be executed by qualified personnel.





Maintenance work without disconnecting the variable speed drive.

Risk of electrical shock!

- Disconnect and isolate the variable speed drive before attempting any work on it. High voltages are present at the terminals and within the variable speed drive for up to 10 minutes after disconnection of the electrical supply.
- Always ensure by using a suitable multimeter that no voltage is present on any drive power terminals prior to commencing any work.





Live wires. Carry out any work on the variable speed drive and motor.

Risk of electrical shock!

Electrical installation work must only be executed by qualified personnel.





WARNING









The machine is contaminated with hazardous material.

Risk of poisoning!

Risk of infection!

If the machine is contaminated with hazardous material:

• Wear appropriate personal protective equipment.





Hot surface.

Risk of burns!

Before doing anything that requires touching the machine, let it cool down first.



Failing to properly maintain the machine.

Risk of injuries!

Risk of premature failure and loss of efficiency!

- Maintenance work must only be executed by qualified personnel.
- Respect the maintenance intervals or ask your Busch representative for service.



Using inappropriate cleaners.

Risk of removing safety stickers and protective paint!

- Do not use incompatible solvents to clean the machine.
- Stop the machine and lock it to prevent accidental start-up.
- Turn off the water supply.

If the machine is equipped with a barrier gas system:

- Close the barrier gas supply.
- Vent the connected lines to atmospheric pressure.

If necessary:

- Drain cooling water through cooling water drain plugs (CWD).
- Disconnect all connections.

8.1 **Maintenance Schedule**

The maintenance intervals depend very much on the individual operating conditions. The intervals given below are considered as starting values which should be individually shortened or extended as appropriate.


Particularly harsh applications or heavy duty operation, such as high dust loads in the environment or in the process gas, other contamination or ingress of process material, can make it necessary to shorten the maintenance intervals significantly.


Interval	Maintenance work	
Monthly	• Check the oil level, see <i>Oil Level Inspection</i> [→ 29].	
	Check the machine for oil leaks. In case of leaks, have the machine repaired (contact Busch).	
Yearly	Carry out a visual inspection and clean the machine from dust and dirt.	
	Check the electrical connections and the monitoring devices.	
	• Clean the inlet screen, see <i>Cleaning the Inlet Screen</i> [→ 29].	


Interval	Maintenance work
Yearly If one or more of these accessories are installed.	 Check the filter of the gas ballast valve (GB) and clean it if necessary, see Cleaning the Gas Ballast Filter (Optional) [→ 30].
	Check the silencer (SI) and clean it if necessary.
	Check the inlet filter, replace the filter cartridge if necessary.
	Check and clean the inlet check valve.
Every 8500 hours or after 1 year	• Change the oil of the gear and bearing housings (both sides), see <i>Oil Change</i> [→ 30].
	Clean the magnetic plugs (MP).
Every 25000 hours or after 4 years	Have a major overhaul on the machine (contact Busch).

Oil Level Inspection 8.2

- Stop the machine.
- Wait 1 minute.
- Check the oil level.

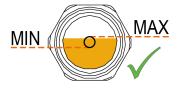


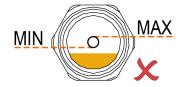

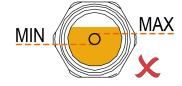


• Fill up if necessary, see Filling Oil [→ 16].

Cleaning the Inlet Screen 8.3

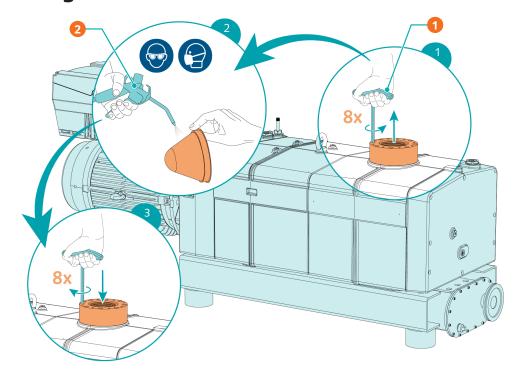

Description			
1	Use a hexagonal key		Use compressed air and wear protective eyewear and mask
			tive eyewear and mask

Cleaning the Gas Ballast Filter (Optional) 8.4

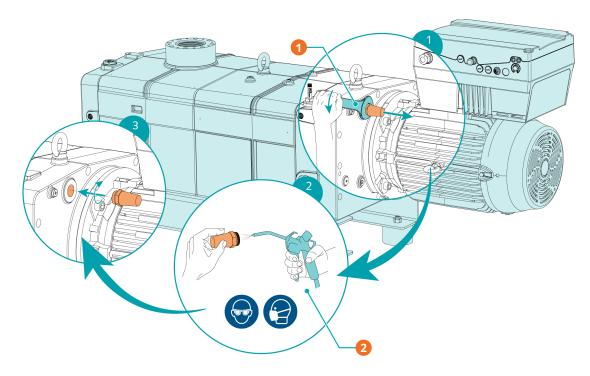

Description			
1	Use a 36 mm wrench	2	Use compressed air and wear protective eyewear and mask

Oil Change 8.5




Use of an inappropriate oil.


Risk of premature failure!

Loss of efficiency!

• Only use an oil type which has previously been approved and recommended by Busch.

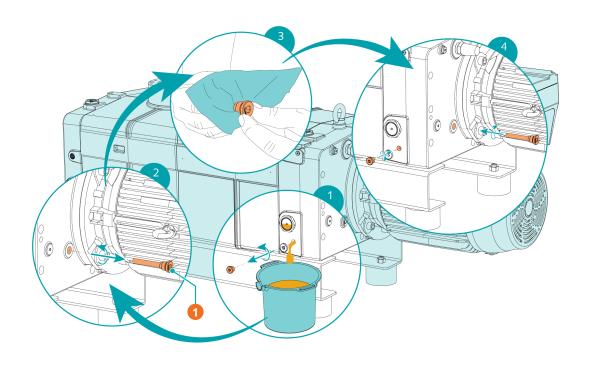


Description Magnetic plug

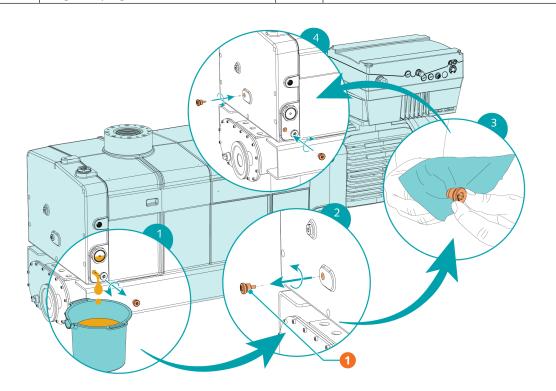

Descri	otion	
1	Magnetic plug	

For oil type and oil capacity see Technical Data and Oil [\rightarrow 39].

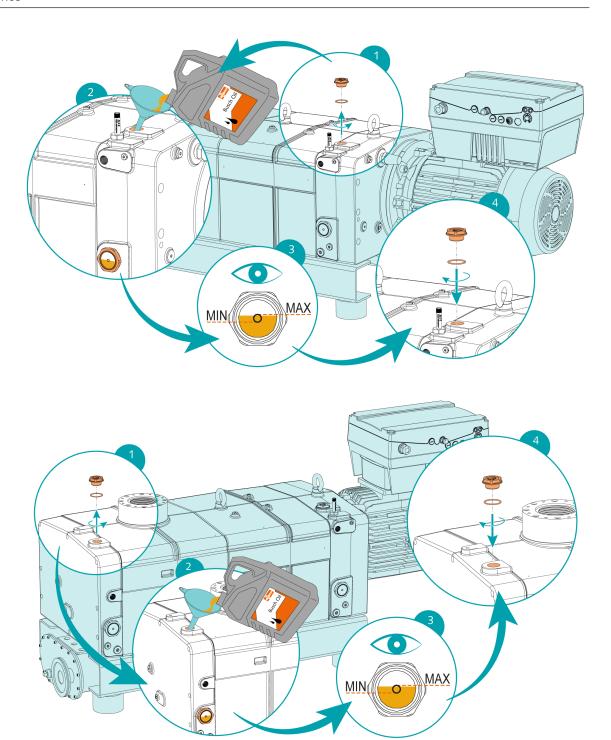

When the oil filling is achieved:

• Write down the oil change date on the sticker.



If there is no sticker (part no. 0565 568 959) on the machine:

• Order it from your Busch representative.

9 Overhaul













The machine is contaminated with hazardous material.

Risk of poisoning!

Risk of infection!

If the machine is contaminated with hazardous material:

• Wear appropriate personal protective equipment.



NOTICE

Improper assembly.

Risk of premature failure!

Loss of efficiency!

• Any dismantling of the machine that goes beyond anything that is described in this manual should be done by Busch authorized technicians.

If the machine has conveyed gas contaminated with foreign materials which are hazardous to health:

• Decontaminate the machine as much as possible and state the contamination status in a 'Declaration of Contamination'.

Busch will only accept machine accompanied by a signed, fully completed and legally binding "declaration of contamination", downloadable from the following link: buschvacuum.com/declaration-of-contamination.

10 Decommissioning





Live wires.

Risk of electrical shock!

• Electrical installation work must only be executed by qualified personnel.





Hot surface.

Risk of burns!

- Before doing anything that requires touching the machine, let it cool down first.
- Stop the machine and lock it to prevent accidental start-up.
- Disconnect the power supply.
- Turn off the water supply.

If the machine is equipped with a barrier gas system:

- Close the barrier gas supply.
- Vent the connected lines to atmospheric pressure.
- Drain cooling water through cooling water drain plugs (CWD).
- Disconnect all connections.

If the machine is to be stored:

• See *Storage* [→ 11].

10.1 Dismantling and Disposal

- Drain and collect the oil.
- Make sure that no oil drips onto the floor.
- Separate special waste from the machine.
- Dispose of special waste in compliance with applicable regulations.
- Dispose of the machine as scrap metal.

11 Spare Parts



Use of non-Busch original spare parts.

Risk of premature failure!

Loss of efficiency!

• Use only original Busch spare parts, consumables and supplies to ensure correct operation of the machine and to validate the warranty.

Spare parts available:

Spare part	Description	Part no.
Inlet filter cartridge	Inlet filter cartridge, paper	0532 000 006
Inlet filter cartridge	Inlet filter cartridge, polyester	0532 121 865
Inlet screen	Inlet screen	0534 565 893

There are no standard spare parts kits available for this product.

For original Busch spare parts:

• Contact your Busch representative.





Live wires.

Risk of electrical shock!

• Electrical installation work must only be executed by qualified personnel.





Hot surface.

Risk of burns!

• Before doing anything that requires touching the machine, let it cool down first.

Problem	Possible Cause	Remedy
The machine does not start.	The motor is not supplied with the correct voltage.	Check the power supply.
	The rotors are jammed or seized.	Rotors inspection or repair the machine (contact Bus- ch).
	Solid foreign matter has entered the machine.	Remove the solid foreign matter or repair the ma- chine (contact Busch).
		Check the inlet screen (IS) at the suction connection.
	The temperature switch (TS)	Let the machine cool down.
	reached the switch point.	See problem "The machine runs too hot".
	The motor is defective.	Replace the motor.
The machine does not reach the usual pressure on the suc-	Suction or discharge lines too long or section diameter too	Use larger diameter or shorter lines.
tion connection.	small.	Seek advice from your local Busch representative.
	The inlet screen (IS) is partially clogged.	 Clean the inlet screen (IS), see Cleaning the Inlet Screen [→ 29].
	The machine runs in the wrong direction.	 Check the direction of rotation, see Wiring Diagram Three-Phase Motor (Pump Drive) [→ 23].
	Internal parts are worn or damaged.	Repair the machine (contact Busch).
The machine runs very noisily.	Wrong oil quantity or unsuitable oil type.	• Use one of the recommended oils in the correct quantity, see <i>Oil</i> [→ 39].
	Defective gears, bearings or coupling element.	Repair machine (contact Busch).

Problem	Possible Cause	Remedy
The machine runs too hot.	Insufficient cooling.	 Make sure to comply with the cooling water require- ments, see Cooling Water Connection [→ 15].
	Ambient temperature too high.	Observe the permitted ambient temperature, see Technical Data.
	Temperature of the process gases at the inlet too high.	Observe the permitted gas inlet temperature, see Technical Data.
	Oil level too low.	Top up oil.
The oil is black.	Oil change intervals are too long.	• Drain the oil and fill in new oil, see <i>Oil Change</i> [→ 30].
	The machine runs too hot.	See problem "The machine runs too hot".

For resolution of problems not listed in the troubleshooting table, contact your Busch representa-

13 Technical Data

		NX 0950 A
Pumping speed (72 Hz)	m³/h	950
	ACFM	560
Ultimate pressure without gas bal-	hPa (mbar) abs.	≤ 0.01
last	TORR	≤ 0.0075
Ultimate pressure with gas ballast	hPa (mbar) abs.	≤ 0.05
	TORR	≤ 0.0375
Nominal motor rating	kW	18.5
	HP	25
Nominal motor speed (72 Hz)	min ⁻¹	4320
	RPM	4320
Maximum intensity	А	35
Circuit breaker (MCCB)	А	C-50 (SCCR 10kA @ 400V)
Sound pressure level (ISO 2151) KpA = 3 dB (50 / 60 Hz)	dB(A)	≤ 75
Ambient temperature range	°C	5 40
	°F	41 104
Maximum allowable counter pres-	hPa (mbar) rel.	200
sure at discharge	TORR	150
Maximum allowable gas inlet tem-	°C	≤ 50 hPa (mbar) abs. : 200
perature according to the inlet		> 50 hPa (mbar) abs. : 70
pressure	°F	≤ 37.5 TORR : 392
		> 37.5 TORR : 158
Relative humidity	at 30°C	90 %
	at 86°F	
Ambient pressure		Atmospheric pressure
Cooling water requirements		See Cooling Water Connection [→ 15]
Oil capacity - Motor side	1	1
	qts.	1.05
Oil capacity - Suction side	1	1
	qts.	1.05
Weight approx.	kg	900
	Lbs.	2000

14 Oil

	VSC 100
ISO-VG	100
Oil type	Synthetic
Part number 1 L packaging	0831 168 356
Part number 5 L packaging	0831 168 357
Part number 10 L packaging	0831 210 162
Part number 20 L packaging	0831 168 359

15 EU Declaration of Conformity

This Declaration of Conformity and the CE-markings affixed to the nameplate are valid for the machine within the Busch scope of delivery. This Declaration of Conformity is issued under the sole responsibility of the manufacturer.

When this machine is integrated into a superordinate machinery the manufacturer of the superordinate machinery (this can be the operating company, too) must conduct the conformity assessment process for the superordinate machine or plant, issue the Declaration of Conformity for it and affix the CE-marking.

The manufacturer

Ateliers Busch S.A. Zone Industrielle CH-2906 Chevenez

declares that the machine: COBRA NC 0950 A; COBRA NX 0950 A

fulfill(s) all the relevant provisions from EU directives:

- 'Machinery' 2006/42/EC
- 'Electromagnetic Compatibility' (EMC) 2014/30/EU
- 'RoHS' 2011/65/EU Restriction of the use of certain hazardous substances in electrical and electronic equipment (incl. all related applicable amendments)

and comply(-ies) with the following harmonized standards that have been used to fulfill those provisions:

Standard	Title of the Standard
EN ISO 12100 : 2010	Safety of machinery - Basic concepts, general principles of design
EN 1012-2 : 1996 + A1 : 2009	Vacuum pumps - Safety requirements - Part 2
EN 60204-1 : 2018	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
EN ISO 13857 : 2019	Safety of machinery - Safety distances to prevent hazard zones being reached by the upper and lower limbs
EN ISO 2151 : 2008	Acoustics - Noise test code for compressors and vacuum pumps - Engineering method (grade 2)
EN IEC 61000-6-2 : 2019	Electromagnetic compatibility (EMC) - Generic standards. Immunity for industrial environments
EN IEC 61000-6-4 : 2019	Electromagnetic compatibility (EMC) - Generic standards. Emission standard for industrial environments

Legal person authorized to compile the technical file and authorized representative in the EU (if the manufacturer is not located in the EU):

Busch Dienste GmbH Schauinslandstr. 1 DE-79689 Maulburg

Chevenez, 01.03.2023

Christian Hoffmann, General Manager

UK Declaration of Conformity 16

This Declaration of Conformity and the UKCA-markings affixed to the nameplate are valid for the machine within the Busch scope of delivery. This Declaration of Conformity is issued under the sole responsibility of the manufacturer.

When this machine is integrated into a superordinate machinery the manufacturer of the superordinate machinery (this can be the operating company, too) must conduct the conformity assessment process for the superordinate machine or plant, issue the Declaration of Conformity for it and affix the UKCA-marking.

The manufacturer

Ateliers Busch S.A. Zone Industrielle CH-2906 Chevenez

declares that the machine: COBRA NC 0950 A; COBRA NX 0950 A

fulfill(s) all the relevant provisions from UK legislations:


- Supply of Machinery (Safety) Regulations 2008
- **Electromagnetic Compatibility Regulations 2016**
- Restriction of the use of certain hazardous substances in Electrical and Electronic Equipment Regulations 2012 and comply(-ies) with the following designated standards that have been used to fulfill those provisions:

Standard	Title of the Standard
EN ISO 12100 : 2010	Safety of machinery - Basic concepts, general principles of design
EN 1012-2 : 1996 + A1 : 2009	Vacuum pumps - Safety requirements - Part 2
EN 60204-1 : 2018	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
EN ISO 13857 : 2019	Safety of machinery - Safety distances to prevent hazard zones being reached by the upper and lower limbs
EN ISO 2151 : 2008	Acoustics - Noise test code for compressors and vacuum pumps - Engineering method (grade 2)
EN IEC 61000-6-2 : 2019	Electromagnetic compatibility (EMC) - Generic standards. Immunity for industrial environments
EN IEC 61000-6-4 : 2019	Electromagnetic compatibility (EMC) - Generic standards. Emission standard for industrial environments

Legal person authorized to compile the technical file and importer in the UK (if the manufacturer Busch (UK) Ltd is not located in the UK): 30 Hortonwood Telford - UK

Chevenez, 01.03.2023


Christian Hoffmann, General Manager

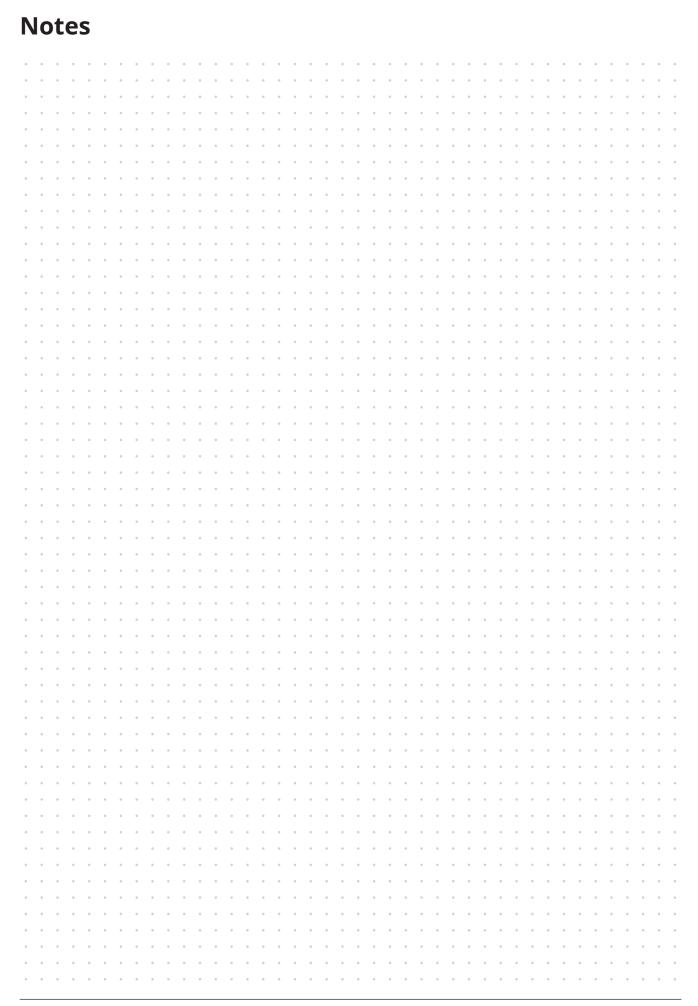

																																							1	Vot	es
																																									—
		۰		٠	۰		۰	۰		۰	۰		۰	۰	۰		۰	۰		۰	۰	۰	۰	۰	۰		۰		٠	٠	٠		0	٠	۰	٠	۰	۰	٠	٠	۰
														۰			۰										۰		٠									٠			۰
٠																									٠															۰	
							٠													٠	٠				۰																
٠			۰		۰	۰	٠	۰		۰	۰		۰	۰		۰	٠		۰	٠	٠	۰	٠	۰	۰	۰	۰	۰	٠		٠	۰	٠	٠	۰		۰	•	٠		۰
۰	٠	۰	۰	٠	۰	۰	٠	۰	۰	۰	۰	۰	۰	۰	٠	۰	۰	۰	۰	۰	٠	۰	۰	٠	۰	۰	۰	٥	۰	٠	۰	۰	٠	۰	۰	۰	۰	۰	۰	۰	۰
۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	0	۰	0	۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	0	0	۰	۰	۰	0	۰	0	0	۰	۰	۰	۰	0	٥
۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰
۰	۰	۰	۰	٠	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	•	۰	۰	۰	0	۰	•	۰	۰	۰	۰	۰	•	۰	۰	۰	۰	۰
۰	۰	۰	0	۰	٥	0	۰	0	۰	۰	۰		۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	0	۰	۰	0	۰	۰	۰	۰	۰	0	۰	۰	٥	۰	۰	۰	۰
0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰
۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	0	0	۰	۰	۰	0	۰	0	0	۰	۰	۰	۰	۰	۰
۰	۰	0	۰	۰	0	0	۰	0	0	۰	0	۰	۰	0	۰	۰	0	۰	0	0	۰	0	0	۰	0	0	۰	0	۰	۰	0	0	۰	0	0		0	۰	۰	0	0
۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	0	0	۰	۰	۰	0	0	۰	0	۰	۰	۰	۰	۰	0
۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	0	۰	۰	0	۰	0	0	۰	۰	۰	0	۰	0	0	۰	۰	۰	0	۰	0
0	۰	۰	0	۰	0	0	۰	0	۰	۰	•		۰	•	۰	0	0	۰	۰	۰	۰	۰	0	۰	۰	0	0	0	0	۰	۰	0	۰	0	0	۰	0	۰	۰	۰	۰
۰	۰	۰	۰	۰	۰	0	۰	۰	0	۰	0	۰	۰	0	۰	۰	۰	۰	۰	0	۰	۰	0	۰	0	۰	0	0	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	0	0
۰	۰	0	0	۰	0	0	۰	0	۰	۰	۰		۰	۰	۰	۰	۰	۰	۰	۰	۰	0	۰	۰	0	0	۰	0	۰	۰	0	0	۰	0	0	۰	0	۰	۰	۰	۰
0	۰	۰	0	۰	0	0	۰	0	۰	۰	۰		۰	۰	۰	0	0	۰	0	۰	۰	0	0	۰	0	0	۰	0	0	۰	۰	0	۰	0	0	۰	0	۰	۰	۰	۰
0	۰	۰	0	۰	۰	0	۰	0	۰	۰	۰	0	۰	•	۰	۰	•	۰	۰	۰	۰	۰	۰	۰	۰	۰	0	0	۰	۰	۰	0	0	0	0	۰	۰	۰	۰	۰	0
۰	۰	۰	•	۰	۰	0	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	•	۰	۰	۰	۰	•	•	۰	۰	۰	۰	0	۰	۰	۰	0	۰	0	۰	۰	۰	۰	0	•	۰
•	۰	0	0	۰	0	0	۰	0		۰	0			0	۰	0	0	۰	0	0	۰	0	0	۰	0	0	۰	0	0	۰	0	0	۰	0	0	۰	0	۰	۰	0	۰
۰	۰	0	0		0	0	۰	0	0	۰	0	۰	۰	0		۰	0	۰	۰	0	۰	0	0	۰	0	•	•	0	0	•	0	•	۰	0	۰		0	۰	0	0	۰
۰	۰	۰	0	۰	۰	0	۰	۰		۰	۰		•	۰	۰	۰	•	۰	۰	۰	۰	۰	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	۰	0	۰	۰	۰	۰	0	۰	0
•	٠	•		٠	۰	0	٠	۰	۰	۰	•	۰		•	۰	۰	•	۰	٠	•	٠	0	•	۰	•	•	۰	0	۰	٠	•	0	۰	0	0	۰	۰	۰	۰	•	۰
			0	٠	0	0		0	۰		•		۰	•	۰		0	٠			•	0		۰		0		0	۰		•	0		0	0	٠	0	۰	٠	•	
0	۰	۰	0	۰	0	0	۰	0		•	۰	0	•	۰	۰	0	۰	۰	۰	۰	۰	•	۰	۰	•	•		0	۰	۰	۰	0	0	0	•	۰	0	۰		۰	0
		•	0	۰	0			•			0		۰	0	۰		0	۰	0	0	۰		0	۰	•		۰	0	•		•		٠	0	•	٠	0	۰	٠	•	0
	٠	•	0	٠	0		٠	0	۰	۰	•			•	۰	0	•	•	۰	۰	٠		•	٠	•	0	٠	0			•			0	٠		0	۰		•	
۰	۰	۰	0	۰	0	0	۰	0	۰	•	۰	0	•	•	۰	0	۰	۰	۰	۰	۰	•	۰	۰	0	0	0	0	۰	•	•	•	0	0	•	۰	0	۰		۰	0
0	٠	0	0		0	0	۰	0			0			0		0	0			0	۰	0	0	٠		0	0	0	•	٠	0	0		0	0		0	۰		0	۰
0	٠	0		۰	0	0	٠	0			0			0		۰	0	۰		0	٠	0	0	۰	0	•	0	0	•	٠	0	0		0	0		0	۰		0	
0					۰	0	•	۰		•	0		0	0		۰	0		۰	0	۰	0	0	۰	0	•	0	0	•		•	0	0	0	0		۰			0	
	۰			۰	0	0	۰	0			0			0			0	۰		0	۰				0		۰	0				0		0			0	۰			
	٠			٠	0		۰	0			•			•	٠	0	0	۰		•	۰		0	٠		0		0	0		•			0	٠	٠	0	۰		۰	
	۰		0	۰	0	0	۰	0							۰	0	•	۰	۰	۰	۰	0	•	٠				0	۰	۰	۰				۰		0	۰	۰	۰	
0	۰				0	0		0			0			0		۰	0			0		0	0	۰			0	0			0	0		0	0		0				
0		•			0	0	٠	0						•			•		٠		٠		•					0			•	0		0	0		0		٠		
	٠			۰		0	٠							•					۰	۰	٠			۰				0	۰			0		0	0		۰		٠		۰
0					0	0		0			0			0		۰	0		٠	0		0		۰			0	0	•		0	0	0	0	0		۰				0
	٠	0			0		٠	0			0			0			0			0	۰		0			0		0	0					0			0			0	
	۰				0		۰	0			0			0		۰	0		۰	0	۰	0	0			•	٠	0	۰		•						0		٠		
					۰	0	۰	۰								۰					۰						0	0				0	0	0	0		۰				0
					0		٠	0																			٠	0						0			0				
0	٠				۰	0	٠	۰								۰					٠							0				0		0	0		۰		٠		0
۰								۰					٠		۰	۰						0													۰		۰		٠		۰
	٠						٠	0													۰							0							۰						
	٠				0	0	٠	0			۰								۰	۰	٠							0				0		0	0				٠		0
																																								٠	
	۰	0	0	۰	۰	0	۰	۰	۰	۰																			۰		0	•		۰	۰	۰	۰	۰	۰	0	
	۰		0	۰	۰	0	۰	٥	۰	۰														۰					0	۰	0	0	۰	0	۰	۰	۰	۰	۰	۰	
0	0	0			0	0	0	0	0	0	0		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		0		0	0	0

Busch Vacuum Solutions

With a network of over 60 companies in more than 40 countries and agencies worldwide, Busch has a global presence. In every country, highly competent local personnel delivers custom-tailored support backed by a global network of expertise. Wherever you are. Whatever your business. We are there for you.

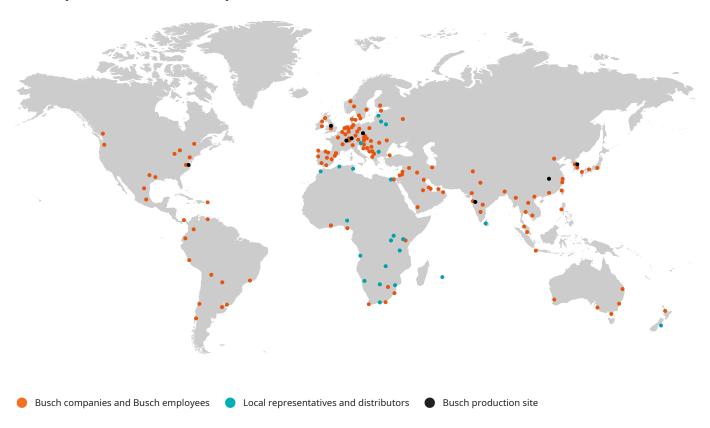

www.buschvacuum.com